

Installation of Dynamic 3D Viewer After Using Monolithic 3D Viewer

If installing the Dynamic 3D Viewer (Aras Dynamic Visualization) in an environment where CAD assemblies were viewed with the Monolithic 3D Viewer, the Dynamic Enable process should be activated for these CAD assemblies because Aras CAD Converter has not generated data for viewing them in the Dynamic 3D Viewer.

For process details and the activation procedure, see the *Dynamic Enabling* section in the *Aras 3D Visualization 35– Administrator Guide*.

